

# PureAutomotive Group

## Emulator Installation Instructions

- 1) Install onto EBP Sensor. The two shorter cables connect in line between the trucks connectors. Plug the “female” end into the sensor, and the “male” end into the wiring harness. *See Figure 1*
- 2) Route the longer cable down to the pressure sensor. Run the cable back, and then down along the dip stick, and then rearward to the sensor. *See Figure 2*
- 3) Install onto pressure sensor. Unplug pressure sensor & plug cable in place of pressure sensor.
- 4) Secure any loose or sagging cable with clips or zip ties as needed.
- 5) Clip the temp sensor emulators onto the temp sensor wiring harnesses. The front temp sensor is in front of the test pipe. Unplug the front temp sensor and plug in a temp sensor emulator.
- 6) Optional: use the included heat shrink on the OEM sensor plug to keep it clean in case you return the truck back to stock in the future

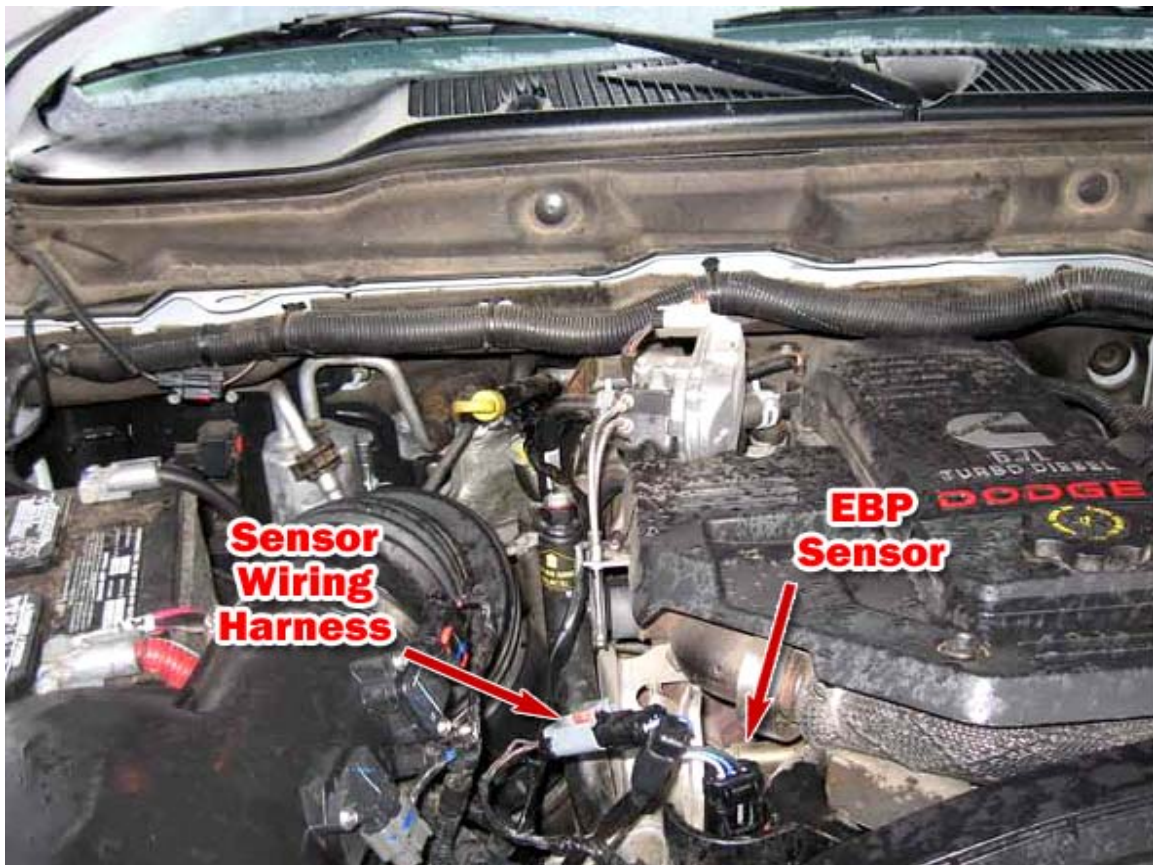


Figure 1

**PureAutomotive Group**  
Emulator Installation Instructions

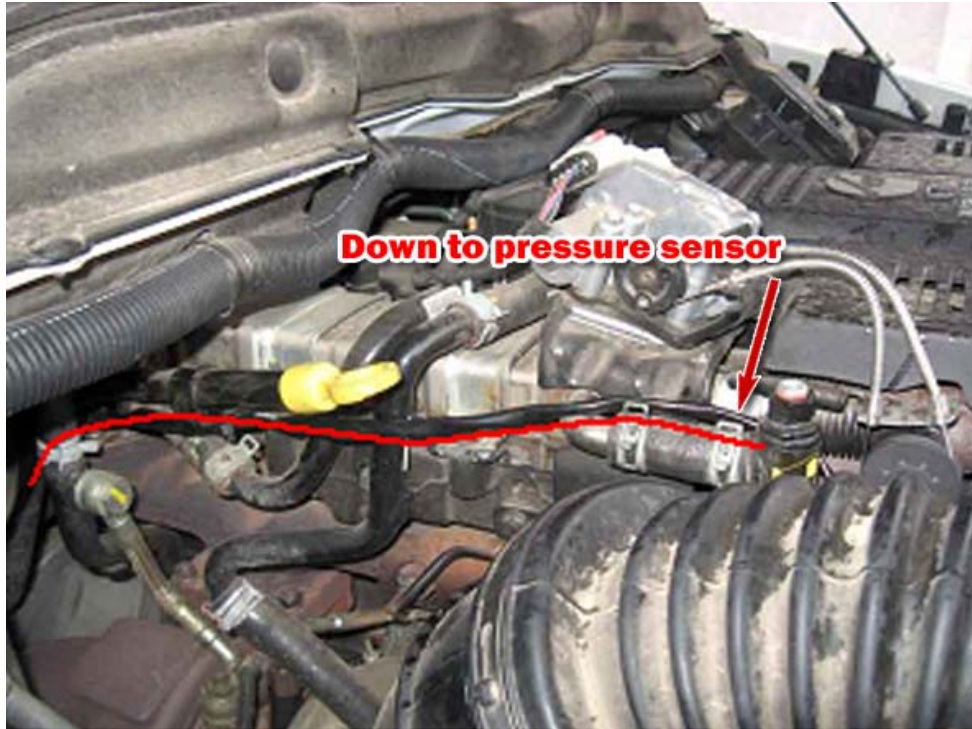


Figure 2



Figure 3

**PureAutomotive Group**  
Emulator Installation Instructions

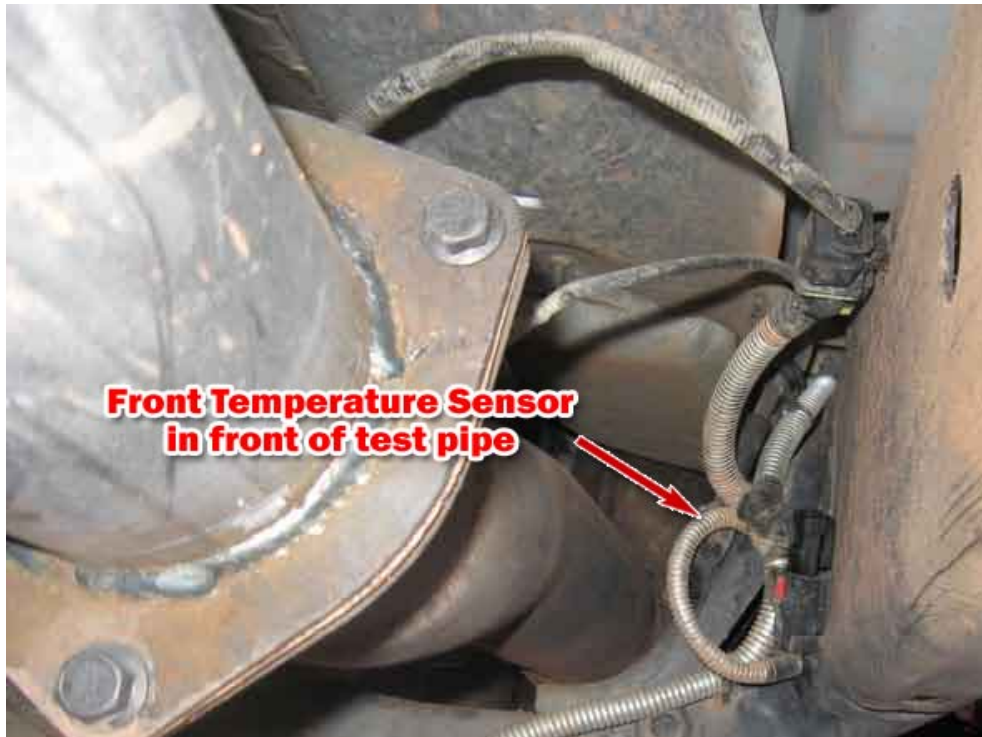


Figure 4



Figure 5

**PureAutomotive Group**  
Emulator Installation Instructions

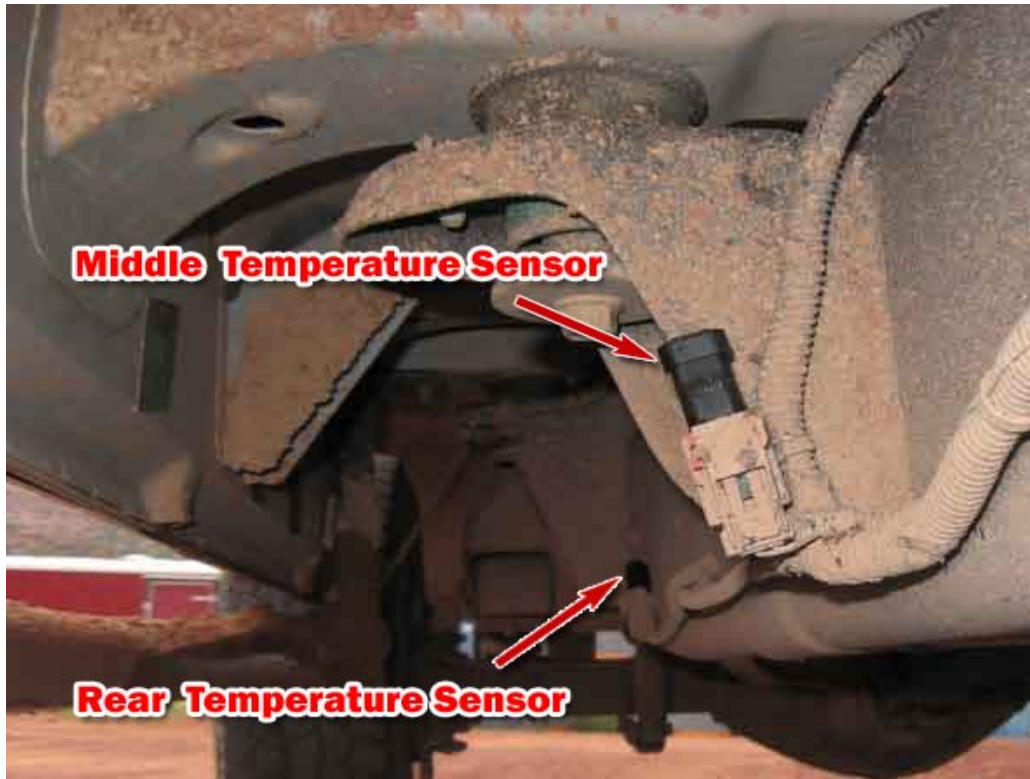


Figure 6



Figure 7